Cordless Cleaner

MODEL 4013D
MODEL 4033D

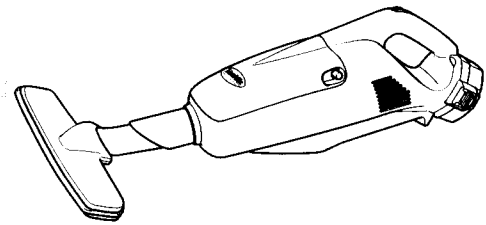

INSTRUCTION MANUAL

⚠ WARNING:
For your personal safety, READ and UNDERSTAND before using.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

www.makitatools.com

SPECIFICATIONS

Model	Rated voltage	Capacity	Dimensions (L x W x H)	Net weight
4013D	D.C. 12 V	0.5 L (1.1 pint)	465 mm x 112 mm x 180 mm (18-1/4" x 4-3/8" x 7-1/8")	0.89 kg (1.96 lbs)
4033D	D.C. 14.4 V	0.5 L (1.1 pint)	473 mm x 112 mm x 180 mm (18-5/8" x 4-3/8" x 7-1/8")	0.89 kg (1.96 lbs)

- Manufacturer reserves the right to change specifications without notice.
- Specifications may differ from country to country.

IMPORTANT SAFETY INSTRUCTIONS

USA012-1

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

⚠ WARNING:
To reduce the risk of fire, electric shock or injury:

1. **Do not leave appliance when battery fitted. Remove battery from appliance when not in use and before servicing.**
2. **Do not expose to rain. Store indoors.**
3. **Do not allow to be used as a toy. Close attention is necessary when used by or near children.**
4. **Use only as described in this manual. Use only manufacturer's recommended attachments.**
5. **Do not use with damaged battery. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.**
6. **Do not handle appliance with wet hands.**
7. **Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.**
8. **Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.**
9. **Turn off all controls before removing the battery cartridge.**
10. **Use extra care when cleaning on stairs.**
11. **Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.**
12. **Use only the charger supplied by the manufacturer to recharge.**
13. **Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.**
14. **Do not use without filters in place.**
15. **Do not charge the battery outdoors.**

SAVE THESE INSTRUCTIONS

This appliance is intended for household use.

ADDITIONAL SAFETY RULES

USB062-1

1. **Read this instruction manual and the charger instruction manual carefully before use.**
2. **Do not pick up wet materials, lit cigarettes or the like.**
3. **Stop operation immediately if you notice anything abnormal.**
4. **If you drop or strike the cleaner, check it carefully for cracks or damage before operation.**
5. **Do not bring close to stoves or other heat sources.**
6. **Do not block the intake hole or vent holes.**

SAVE THESE INSTRUCTIONS

FUNCTIONAL DESCRIPTION

⚠ **CAUTION:**

- Always be sure that the cleaner is switched off and the battery cartridge is removed before adjusting or checking function on the cleaner.

001584

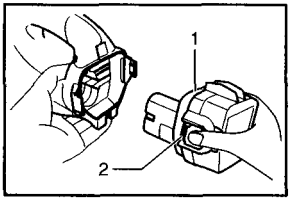

1. Battery cartridge
2. Push button

Installing or removing battery cartridge

- Always switch off the cleaner before insertion or removal of the battery cartridge.
- To remove the battery cartridge, withdraw it from the cleaner while pressing the buttons on both sides of the cartridge.
- To insert the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Always insert it all the way until it locks in place with a little click. If not, it may accidentally fall out of the cleaner, causing injury to you or someone around you.
- Do not use force when inserting the battery cartridge. If the cartridge does not slide in easily, it is not being inserted correctly.

001585

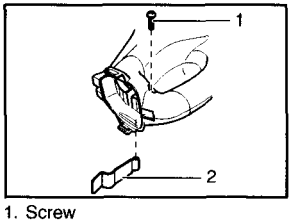

1. Screw
2. Set plate

Installing set plate (Optional accessory) for 4013D only

Always install the set plate when using battery cartridges 1200, 1202 or 1202A. Install the set plate on the cleaner with the screw provided.

Charging

Charge the battery cartridge with your Makita charger properly before use.

Following batteries can be used for this cleaner;

Model	Batteries
4013D	1220, 1222, 1234, 1235, 1200, 1202, 1202A
4033D	1420, 1422, 1434, 1435

Switch action

⚠ **CAUTION:**

- Always be sure that the dust bag or paper filter is installed properly in the cleaner before use. Improper installation may allow dust to enter the motor, resulting in malfunction of the cleaner.
- Always switch off the cleaner after each use to prevent damage to the cleaner and to lengthen the service life of the batteries.

001587

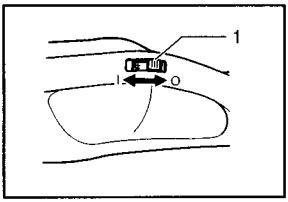

1. Switch lever

To start the cleaner, slide the switch lever forward to the "I" position.

To stop the cleaner, slide the switch lever back to the "O" position.

ASSEMBLY

⚠ **CAUTION:**

- Always be sure that the cleaner is switched off and the battery cartridge is removed before carrying out any work on the cleaner.

Dust disposal

⚠ **CAUTION:**

- Empty the cleaner before it becomes too full, or the suction force weakens.

001588

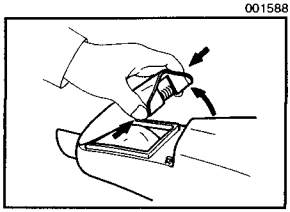

Depress the buttons and open the front cover.

001589

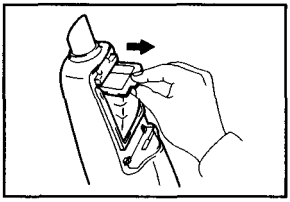

Take the dust bag out of the cleaner carefully so that the contents will not spill out.

Empty the contents out of the dust bag.

001590

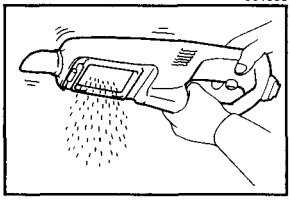

Also empty out the dust inside the cleaner itself. Failure to do so may cause the sponge filter to be clogged or the motor to be damaged.

001591

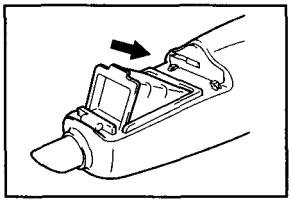

Installing dust bag

Place the dust bag into the cleaner cavity.

001592

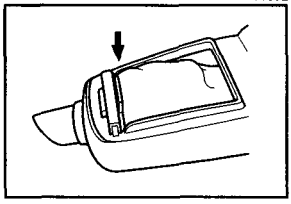

Insert the holder of the dust bag all the way into the slots in the cleaner cavity.

⚠ **CAUTION:**

- Forgetting to install the dust bag, failure to insert the holder of the dust bag all the way into the slots or using a broken or ripped bag, may allow dust to get into the motor. This may result in motor failure.

001593

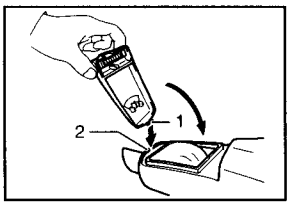

1. Hook
2. Front lip

Hook the front cover onto the front lip of the cleaner. Then close the front cover.

NOTE:

- When installing the paper filter, follow the same procedures for the dust bag.
- Always unfold a new paper filter before installing it on the cleaner.

001594

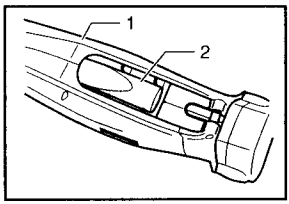

1. Cleaner body
2. Corner nozzle

Corner nozzle storage

When not in use, the corner nozzle can be conveniently stored in the cleaner body.

OPERATION

001595

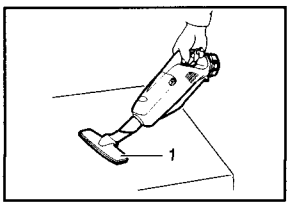

1. Nozzle

Cleaning (Suction) Nozzle

Attach the nozzle to clean off tables, desks, furniture etc. Nozzle slips on easily.

001596

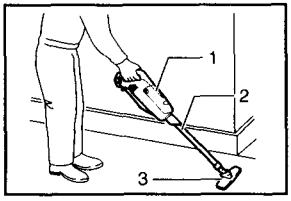

1. Cleaner body
2. Extension wand
3. Nozzle

Nozzle + Extension wand (Straight pipe)

The extension wand fits in between the nozzle and the cleaner itself. This arrangement is convenient for cleaning a floor while standing erect.

001597

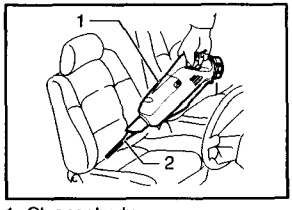

1. Cleaner body
2. Corner nozzle

Corner nozzle

Fit on the corner nozzle for cleaning corners and crevices of a car or furniture.

001598

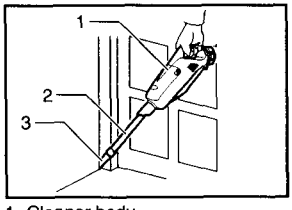

1. Cleaner body
2. Extension wand
3. Corner nozzle

Corner nozzle + Extension wand (Straight pipe)

In tight quarters where the cleaner itself cannot squeeze in, or in high places hard to reach, use this arrangement.

001599

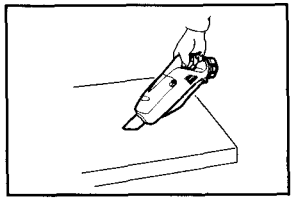

The cleaner is possible to suck dust without nozzle, too.

MAINTENANCE

⚠ **CAUTION:**

- Always be sure that the cleaner is switched off and the battery cartridge is removed before carrying out any work on the cleaner.

001600

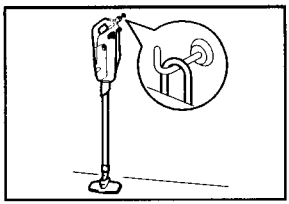

After use

When storing the cleaner, hang it from a nail using the convenient hanger in back.

001601

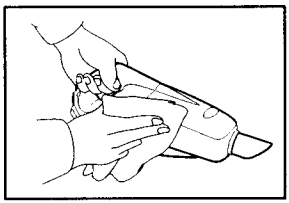

Cleaning

From time to time wipe off the outside (cleaner body) of the cleaner using a cloth dampened in soapy water.

Never use gasoline, thinner or the like. Discoloration or cracks may result.

Wash the dust bag in soapy water occasionally. Dry it out thoroughly before use. An insufficiently dried bag may cause poor suction and shorten the service life of the motor.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

EN0001-1

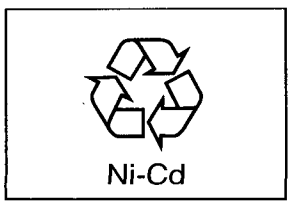

Recycling the Battery

The only way to dispose of a Makita battery is to recycle it. The law prohibits any other method of disposal.

To recycle the battery:

1. Remove the battery from the tool.
2. a) Take the battery to your nearest Makita Factory Service Center

   or

   b) Take the battery to your nearest Makita Authorized Service Center or Distributor that has been designated as a Makita battery recycling location.

Call your nearest Makita Service Center or Distributor to determine the location that provides Makita battery recycling. See your local Yellow Pages under "Tools-Electric".

ACCESSORIES

⚠ **CAUTION:**

- These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Makita service center.

- Extension wand
- Nozzle assembly
- Nozzle assembly (For carpet)
- Corner nozzle
- Shelf brush
- Flexible hose
- Paper filters (5 pcs.)
- Set plate
- Battery cartridge & charger

<table>
<tr><th>Model</th><th>Battery cartridge</th><th colspan="3">Battery charger</th></tr>
<tr><td rowspan="2">4013D</td><td>1220/1200</td><td>DC1470</td><td rowspan="4">DC1411</td><td rowspan="4">DC1422</td></tr>
<tr><td>1202/1202A/1222/
1234/1235</td><td>-</td></tr>
<tr><td rowspan="2">4033D</td><td>1420</td><td>DC1470</td></tr>
<tr><td>1422/1434/1435</td><td>-</td></tr>
</table>

Memo

Memo

Cut

First-Class
Postage
Required

Post Office will
not deliver
without proper
postage.

Makita U.S.A., Inc.
14930 Northam Street
La Mirada, CA 90638-5753

Fold

MAIL THIS PORTION

Your answer to the following questions are appreciated.

1. This product was purchased from:

- ☐ Home Center
- ☐ Hardware/Lumber Store
- ☐ Tool Distributor
- ☐ Industrial Supply
- ☐ Construction Supply
- ☐ Other ( )

2. Use of the product is intended for:

- ☐ Construction Trade
- ☐ Industrial Maintenance
- ☐ Home Maintenance
- ☐ Hobby
- ☐ Other ( )

3. How did you learn of about this product:

- ☐ Magazine
- ☐ From Dealer
- ☐ Newspaper
- ☐ Store Display
- ☐ Catalog
- ☐ Radio
- ☐ Exhibition
- ☐ From Friend
- ☐ Previous Usage
- ☐ Other ( )

4. Most favored points are:

- ☐ Design
- ☐ Features
- ☐ Size
- ☐ Price
- ☐ Makita Brand
- ☐ Repair Service
- ☐ Durability
- ☐ Power
- ☐ Other ( )

5. Any comments:

DATE PURCHASED			MODEL NO.
MONTH	DAY	YEAR	SERIAL NO.

INTL.	LAST NAME / COMPANY NAME	STATUS Married	STATUS Single	SEX M	SEX F

STREET ADRESS

CITY

STATE	ZIP CODE	PHONE	AREA CODE

AGE: ☐ Under 19 ☐ 20-29 ☐ 30-39 ☐ 40-49 ☐ 50-60 ☐ Over 60

BE SURE TO COMPLETE THE CUSTOMER'S PORTION OF THIS FORM AND RETAIN FOR YOUR RECORDS.

Please return this portion by facsimile or mail.

Facsimile No: (714) 522-8133

Paste Paste Paste Paste Paste Paste Paste Paste

FACTORY SERVICE CENTERS

1-800-4-MAKITA

RETAIN THIS PORTION FOR YOUR RECORDS

ALABAMA
2365 Pelham Parkway
Pelham, AL 35124
(205) 620-1791

ARIZONA
3707 E. Broadway Rd., Ste. 6
Phoenix, AZ 85040
(602) 437-2850

ARKANSAS
Shackleford Shopping Center
240 South Shackleford Rd.,
Ste. C
Little Rock, AR 72211
(501) 224-5733

CALIFORNIA
41850 Christy St.
Fremont, CA 94538-5107
(510) 657-9881

1421 N. Clovis Ave., Ste. 112
Fresno, CA 93727
(559) 252-5166

14930 Northam St.
La Mirada, CA 90638-5753
(714) 522-8088

1970 Fulton Avenue
Sacramento, CA 95825
(916) 482-5197

1440 South "E" Street
San Bernardino, CA 92408
(909) 885-1289

7674 Clairemont Mesa Blvd.
San Diego, CA 92111
(858) 278-4471

1714 E. McFadden Ave., Unit M
Santa Ana, CA 92705
(714) 667-5066

1565 Winchester B.
Campbell, CA 95011
(408) 379-0377

16735 Saticoy St., Ste. 105
Van Nuys, CA 91406
(818) 782-2440

COLORADO
11839 E. 51st Ave.
Denver, CO 80239-2709
(303) 371-2850

CONNECTICUT
508 Spring St.
Windsor Locks, CT 06096
(860) 292-6405

FLORIDA
620 Douglas Ave. Suite 1302
Altamonte Springs, FL 32714
(407) 774-6000

1301 W. Copans Road
Pompano Beach, FL 33064
(954) 970-4722

Thompson Center Waters
5501 W. Waters Ave., Ste. 406
Tampa, FL 33634
(813) 886-8292

GEORGIA
4680 River Green Parkway NW
Duluth, GA 30096
(770) 476-8911

HAWAII
4510 Salt Lake Blvd., Suite A7
Honolulu, HI 96818
(808) 847-0038

ILLINOIS
1450 Feehanville Dr.
Mt. Prospect, IL 60056-6011
(847) 297-3100

INDIANA
8403 Michigan Road, Unit 1
Indianapolis, IN 46268
(317) 334-9980

KANSAS
8819 W. 95th St.
Overland Park, KS 66212
(913) 642-1111

KENTUCKY
1215 S. Hurstbourne Parkway
Louisville, KY 40222
(502) 326-3740

LOUISIANA
5626 Jefferson Hwy.
Harahan, LA 70123
(504) 733-4138

MARYLAND
7541 - 45 Ritchie Highway
Glen Burnie, MD 21061
(410) 590-0160

MASSACHUSETTS
232 Providence Hwy.
Westwood, MA 02090
(617) 461-9754

MICHIGAN
37454 Ann Arbor Trail
Livonia, MI 48150
(313) 432-1012

MINNESOTA
6427 Penn Ave. South
Richfield, MN 55423
(612) 869-5199

MISSOURI
9876 Watson Road
St. Louis, MO 63126-2221
(314) 909-9889

NEBRASKA
4129 S. 84th St.
Omaha, NE 68127
(402) 597-2925

NEVADA
3375 S. Decatur Blvd.
Suites 22 - 24
Las Vegas, NV 89102
(702) 368-4277

NEW JERSEY
251 Herrod Blvd.
Dayton, NJ 08810-1539
(609) 655-1212

NEW MEXICO
5805 Menaul Blvd. NE
Albuquerque, NM 87110
(505) 881-4619

NEW YORK
4917 Genessee Street
Cheektowaga, NY 14225
(716) 685-9503

131-35 31st Ave.
Flushing, NY 11354
(718) 886-0971

NORTH CAROLINA
3501-G S. Tryon St.
Charlotte, NC 28217
(704) 527-0611

OHIO
6253 E. Main St.
Columbus, OH 43213
(614) 860-0222

6379 Pearl Road
Parma Heights, OH 44130
(440) 843-7555

1617 E. Kemper Rd.
Sharonville, OH 45246
(513) 771-0788

OKLAHOMA
552 E. Memorial Road
Oklahoma City, OK 73114
(405) 752-2655

OREGON
828 19th Avenue., N.W.
Portland, OR 97209
(503) 222-1823

PENNSYLVANIA
Springwater Plaza
364 Wilmington W. Chester
Pike
Glen Mills, PA 19342
(610) 459-4122

6200 Babcock Blvd.
Pittsburgh, PA 15237
(412) 366-6363

PUERTO RICO
200 Guayama St.
Hato Rey, PR 00917
(787) 250-8776

TENNESSEE
4655 Nolensville Rd.
Nashville, TN 37211
(615) 331-9922

TEXAS
12801 Stemmons Fwy. Ste. 809
Farmers Branch, TX 75234
(972) 243-1150

12701 Directors Dr.
Stafford, TX 77477-3701
(281) 565-8665

3453 IH-35 North, Ste. 101
San Antonio, TX 78219
(210) 228-0676

UTAH
145 E. 1300 S., Ste. 101
Salt Lake City, UT 84115
(801) 359-3410

VIRGINIA
5760 Northampton Blvd., Ste.
102
Virginia Beach, VA 23455
(757) 460-0280

WASHINGTON
22220 84th Ave. So., Bldg. A
Kent, WA 98032
(253) 395-8055

WISCONSIN
Lincoln Plaza Shopping Ctr.
2245 S. 108th St. West Allis, WI
53227
(414) 541-4776

CUSTOMER'S RECORD

When you need service: Send complete tool (prepaid) to one of the Makita Factory Service Centers listed, or to an Authorized Makita Service Center. Be sure to attach a letter to the outside of the carton detailing the problem with your tool.	Date Purchased
	Dealer's Name & Address
	Model No.
	Serial No.

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one-year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others:
- repairs are required because of normal wear and tear:
- The tool has been abused, misused or improperly maintained:
- alterations have been made to the tool.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE-YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary form state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation